

Annual Service Procedure Sheet

ELECTRIC

- Power wash vehicle.
- Inspect front wheel bearings.
- Inspect, clean and adjust rear brakes.
- Check and fill differential oil to proper level.
- Check steering linkage and adjust as required, including gear box.
- Check front alignment. Re-align if needed.
- Lube front suspension and all other fittings.
- Lube brake shaft bearing and return spring as required.
- Check accelerator pedal and linkage for free movement and return as required.
- Lube accelerator push rod pivots.
- Check and correct battery water level.
- Check battery tops and terminals.
- Check battery hold down and coat terminal connections.
- Check charger receptacle.
- Check car for proper solenoid engagement and V-glide slide.
- Check reverse buzzer operation.
- Check motor wires and resistors for loose connections.
- Check F&R switch for free contact movement, lube if necessary.
- Check tires for wear and damage and adjust tire pressure: 18 to 20 PSI.
- Check seat bolts. Tighten if necessary.

GAS

- Power wash vehicle.
- Inspect front wheel bearings.
- Inspect, clean and adjust rear brakes.
- Check and fill differential oil to proper level.
- Check transmission oil level.
- Check steering linkage and adjust as required, including gearbox.
- Check front alignment. Re-align if needed.
- Lube front suspension and all other fittings.
- Lube brake shaft bearing and return spring as required.
- Check accelerator pedal and linkage for free movement and return as required.
- Lube governor and accelerator pivots.
- Check governor settings, adjust to specs.
- Replace air filter and check mounting bolts.
- Replace fuel filters, check fuel lines and tank as required.
- Change engine oil and filter. Check oil light operation.
- Check torque converter operation.
- Check transmission shift linkage.
- Lube F & R lever pivot.
- Check exhaust for leaks or breaks.
- Check condition of muffler and brackets.
- Inspect drive belt.
- Inspect starter/generator brushes.
- Check starter/generator belt, adjust as required.
- Check tires for wear and damage and adjust tire pressure: 12 to 14 PSI.
- Check seat bolts, engine mounts, differential, F & R lever screw. Tighten if necessary.
- Inspect battery cables. Spray cables. Check water level & hold downs.
- Check reverse buzzer operation.
- Check charging system.



CENTURY Equipment

